



Motorcycle • Snowmobile • Boat • ATV • Personal Watercraft


Congratulations on your purchase of Fastrax Sport Bike Luggage. Assembled to your sport bike, it will provide extra storage for short or long trips. Please carefully read the information below before installation.

⚠ WARNING

The saddlebags must be installed so as not to interfere with rear wheel or suspension components. Failure to assure adequate clearance will result in serious injury. Obstructing side reflectors is not recommended.

Saddlebag Assembly Instructions

1. Open saddlebag and remove contents.
2. Locate bottom bag support.
 - Note:** Support has velcro on bottom side that must match velcro in bag. It is not in the center.
3. Bend support as shown. Plastic and velcro strip will be on the bottom.

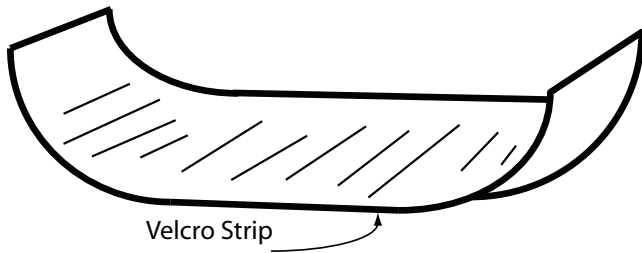

4. Insert support into pocket inside the front of the bag. If support is all the way in pocket, velcro strips will match. **DO NOT** attach velcro at this time.
5. Insert support into rear pocket inside bag. It will be necessary to slightly bend support up to fit.
6. Press velcro strips to mate. Smooth out any wrinkles.
7. Determine location of exhaust pipe.
 - A. If tail pipe is under tail section of bike - place silver side of protective heat shield to fender. Weave velcro straps from saddlebags through webbing on black side of protective pad. Fasten.
 - B. If tail pipe is on side of tail section - place silver side of protective heat shield toward saddle bag. This will protect fender from any rubbing that may occur. Weave velcro straps from saddlebags through webbing on Silver side of protective pad. Fasten.

DOWCO, Inc.
4230 Clipper Drive
Manitowoc, WI 54220
Fax: 920-682-5891
Phone: 1-800-558-7755
www.dowcopowersports.com



Fastrax Value/Deluxe Series Sport Bike Saddlebag and Tail Bag Instructions

Installation

1. Place Saddlebags over fender/tail section. Loosen velcro straps so the bags hang freely from the fender without tipping either to far outward or inward. Place top part of protective pad against tail section.
2. Locate loop straps and secure around suitable frame member. Connect to D-rings on front of saddlebags.
3. Position rear strap under license plate bracket or around fender. An additional strap has been provided for bikes with license plate brackets that are not readily accessible.
4. Tighten side straps, then rear strap. Saddlebags should hang straight down. Readjust if necessary. Do not overtighten.
5. Saddlebags should be positioned a minimum of 1" above exhaust pipe. Although the bottom of the saddlebag contains an aluminized heat shield, care should be taken to ensure adequate air flow under the saddlebag to reduce exposure to heat extremes.

⚠ WARNING

If your side reflector is obstructed, you must reposition it. The reflective side striping on your saddlebags will not replace the factory striping for visibility.

Mounting Tail Bag Only

1. Place Tail Bag on tail section of bike with carrying handle facing the rear of bike. (Fig. 1)
2. Locate both straps w/(1) hook.
3. Secure straps to passenger foot peg or suitable fixed frame member on left and right side of bike. (Fig.2)
4. Connect straps to front D-rings on bag.
5. Locate strap w/(2) hooks.
6. Install strap w/(2) hooks around tail section of bike and connect to bag. (Fig. 1)
7. Adjust straps to create a snug fit on bike.
8. Insure that bag does not interfere with indicator lights, tail pipe or any moving parts of the motorcycle. If you encounter interference, readjust bag position using adjustable straps.

Item # 142291-00
Rev. 05/16/08
Printed in China

Mounting Tail Bag to Saddlebags

1. Install saddlebags on bike per instructions on page one.
2. Place Tail bag on tail section of bike with handle toward the rear.
3. Use the 4 short straps with clips on both ends to connect to the 4 D-rings on the bottom of the Tail bag to the 4 D-rings on the tops of the saddlebags.
4. D-rings on the saddlebags will each hold two clips.
5. Adjust all straps to securely position bag in desired location.
6. Insure that all bags do not interfere with indicator lights, exhaust pipes or any moving parts of the motor-cycle. If you encounter interference, readjust bag position using adjustable straps.

Fig. 1



Fig. 2



Fig. 3



Fig. 4



Care & Cleaning:

Use a mild detergent and soft brush to remove dirt or road grime from the bags. Rinse thoroughly and dry before using. Do not put in washer or dryer. Dry-cleaning is not recommended.

Note: Your bags are manufactured from heavy-weight waterproof polyester materials.

However, in the event of heavy rain, moisture may enter the bags through seams or zippers.

It is highly recommended that important papers, valuable items, or clothing be wrapped in plastic for added protection.

 **WARNING**

Overloading any saddlebag will result in a high center of gravity, causing bike to become top heavy and susceptible to unexpected tipping on lean-in while negotiating high speed turns. SADDLEBAGS MUST BE LOADED EVENLY SIDE-TO-SIDE. MAXIMUM ALLOWABLE LOAD LIMIT IS 7 LBS.